


Vr6

USER MANUAL

MANUAL DO UTILIZADOR

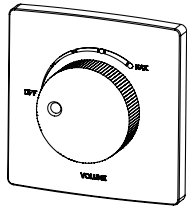


Wall Volume Regulator
Regulador de Volume de Parede

CONNECTIONS

Controller Rear Connection Instruction
This volume regulator supports 2-line and 3-line systems.


1 Please choose the appropriate wiring method according to the type of volume controller you have and the type of your broadcast system host.

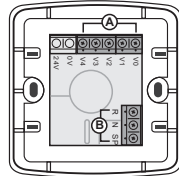

Rear of the controller

- A. Extension ports** (can connect to a power expander)
- B. Broadcast signal cable** (Hot +)
Override ring wiring
Broadcast signal cable (Cold -)


100V Speaker Connections

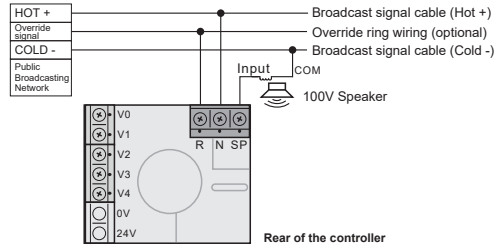

INSTALLATION

Installation


The controller is installed on the cassette in the wall with two screws; the cover is fastened to the controller, and the knob is finally installed.

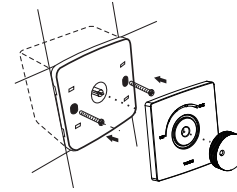




Insert the knob. Rotate it to the left until it stops. Remove the knob, align the circle point with the "OFF" position and insert it again.

Power Expander

Connect the power expander to increase the regulator power from 6W to 60W. Be sure not to add more 100V speakers than the maximum allowed power.

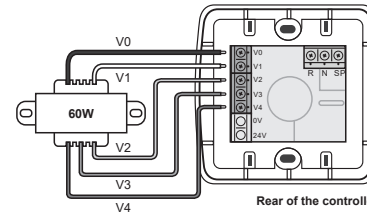

TECHNICAL INFORMATION

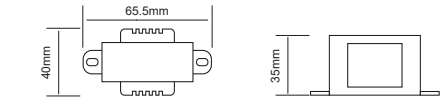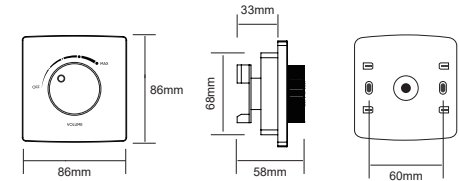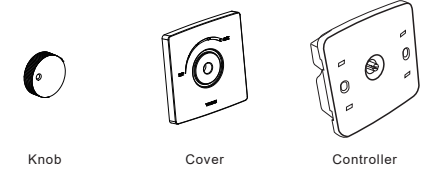


Technical Specifications

Features	Power	Diagram
Override Function and scalable power	Máx. 6W	2-Line and 3-Line Systems

LIGAÇÕES

Instruções de ligação traseira do controlador
Este regulador de volume suporta sistemas de ligações de 2 e 3 linhas.


1 Por favor, escolha o método de ligação apropriado de acordo com o seu tipo de regulador de volume ou seu tipo de sistema de transmissão.

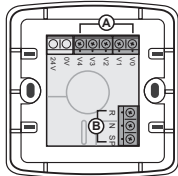

Traseira do Controlador

- A. Portos de Expansão** (Pode ligar-se um expansor de potência)
- B. Cabo do Sinal de Transmissão** (Hot +)
Cabo de Sobreposição (Override)
Cabo do Sinal de Transmissão (Cold -)


Ligações à Coluna de 100V

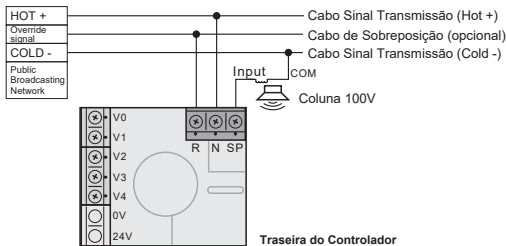

INSTALAÇÃO

Instalação


O controlador é instalado na caixa de parede com dois parafusos; a tampa é presa ao controlador e o botão é finalmente instalado.

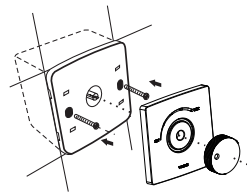




Insira o botão. Gire-o para a esquerda até ele parar. Remova o botão, alinhe o ponto do círculo com a posição "OFF" e insira-o novamente.

Expansor de Potência

Ligue o expansor para aumentar a potência do regulador de 6W para 60W. **Certifique-se de não adicionar mais colunas de 100V do que a potência máxima permitida.**

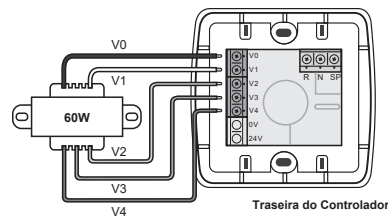

INFORMAÇÃO TÉCNICA

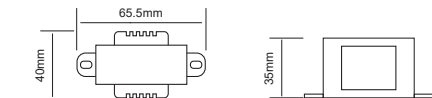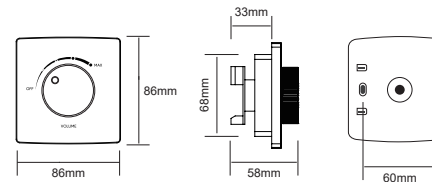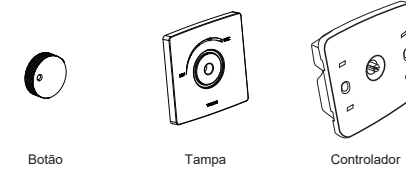

Especificações Técnicas

Funcionalidades	Potência	Diagrama
Função de Sobreposição e Potência Escalável	Máx. 6W	Sistema de 2 e 3 Linhas